



MAGIC LIGHT EASEL USER MANUAL

INTRODUCTION

Congratulations on the acquisition of Magic light easel!
The exterior might be slightly different from that shown in the instruction.
Please read the instruction carefully and save it before using your Magic light easel (MLE).

TECHNICAL PARAMETERS


Power:	14,4 W	Temperature regime:	+10°C - +45°C
Network voltage:	~ 220 V	Relative humidity in the room:	80 %
Voltage used by ML:	= 12 V	Weight:	4 kg
Current flow:	0,6 A	Measurements:	55,7 x 46,7 cm
Electrical frequency:	50 Hz		

Remarks:

1. Easel is made in a way, that you could take out the glass from wooden part, rinse the glass with cool water, mop it and put in again. It is forbidden to immerse wooden part in water or other fluids, to pour fluids on it!
2. When lifting the easel, hold the wooden part from underneath.
3. The use of MLE, at a temperature close to limit, reduce radiated light flow and shortens operating time of the product.

CONNECTION:

Before connecting make sure, that the device has no damages.
Needed parts in order the device would function: the MLE itself (A), 12 V adapter (B), remote control (C) and electric power source. The easel consists from three parts: special glass (A.1), wooden base (A.2) and wooden legs set with screws and spanner (A.3).

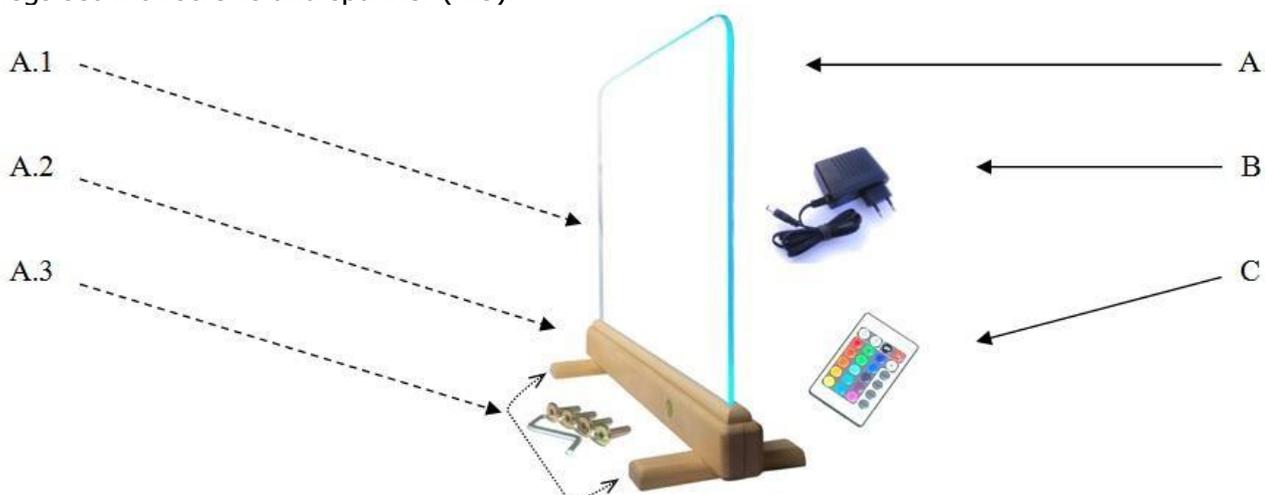


Open the package and take out the glass (A.1) from wooden base (A.2). Fix the legs (A.3) to the bottom of the base (A.2) using screws and spanner. Then place the glass (A.1) to the wooden base (A.2) again.

Connect adapter (B) fork to electric power source. Then plug the other end of adapter (B) to the connector socket of MLE (A).

Warning:

Before connecting the device to the power supply, make sure that the operating voltage indicated on the product, meets your power source voltage.

Power supply scheme

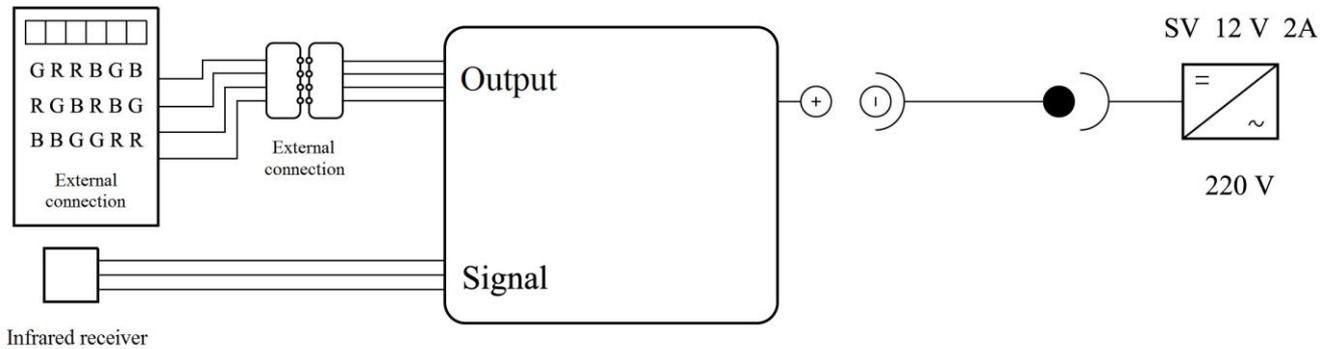

Remote control (C) uses one 3V – CR2025 type battery. When you want to put the battery in follow these rules:

1. Open the lid of the battery compartment, that is in the back side of the remote.
2. Remove the protective plastic film insert enclosed between lid and inner part of the battery compartment.
3. Insert a new lithium battery as shown in the instructions on the back of the remote. Carefully check that the polarity of the batteries matches the polarity of the contacts in the battery compartment.
4. Close battery compartment.
5. Remote control is ready for use.

When the battery is exhausted, remove it from the remote control and change to a new one following the same rules.

Warning:

Do not leave exhausted battery in the remote control. Do not throw batteries into the fire, trash container, etc. Collect the exhausted batteries and take them to the battery collection point.

Advice:

If you are not using the product for longer periods of time, remove battery from the remote control.

Usage

Magic light easel is meant for play, drawing and therapy spheres. It can also be used as a night lamp.

To switch on the ML easel, connect it as indicated in chapter "Connection". Then point the remote control eye (it is at the top of the remote) to the Jonely sign at the right side of MLE wooden base and push the button ON.



Brightening (+)	Darkening (-)	OFF	ON
Red	Green	Navy blue	White
Coral	Green (light)	Blue (dark)	Fast jumpy colours (FLASH)
Orange (dark)	Cyan	Violet	Fade in & fade out (STROBE)
Orange (light)	Sky blue	Purple	Evenly devolve colours (FADE)
Yellow (light)	Blue	Pink	RGB colours change (SMOOTH)

Look at the grey field on the remote control that includes buttons of 16 colours. Push the one you like and the table will illuminate that colour. To change the colour, simply push the other colour button.

Warning:

If one of the buttons, marked with letters R, G, B, is pressed and held for more than 5 seconds, the colors will reverse (re-programming). To restore the colors, press another one from buttons marked with R, G, B letters and hold it for 5 seconds.

Light intensity adjustment

You can darken or lighten every colour. If you want to have a darker shade, press the button ☀ as many times until you reach the desired level. If you want to have a lighter shade, analogical push the button ☀.

Color change programs

If you want the colours to change each other without pushing the buttons for every of them, we encourage you to try 4 automatic colour change programs. The programs have separate buttons on the right side of the remote control (the programs can be switched):

- FLASH. Jumpy change of colours.
- STROBE. Fade in & fade out.
- FADE. Colours devolve evenly from one to another.
- SMOOTH. Changing main 3 colours – red, green and blue.

Color change frequency

When you choose one of the automatic colour change programs (FLASH, STROBE, FADE, SMOOTH), you also get the possibility to control colour change frequency. If you want the colours to change faster, push the button ☀ as many times to reach the desired speed. If you want the colours to change slower, analogical push the button ☀.

REMARK: when you choose automatic colour change program, the button ☀ and ☀ regulate only colour change frequency, function of darken – lighten is not available at that moment.

Drawing on the Magic light easel

After choosing desired colour or automatic colour program, prepare the means of drawing / gluing / stamping. Start to create! You can create using:

- Paint for fingers,
- Gouache and watercolor,
- Markers,
- Stamps,
- Glass decoration paint,
- Etc.



Advices:



On Magic light easel you can draw from both sides. To make it more interesting – ask your family members or friends to join you. The painting will become unpredictable and the process of such creation you will remember for a long time.



The painting will look different just by switching the colour of illumination. So do not hurry to clean the glass – switch colours and enjoy the conversion.



On the glass with art means you can paint / glue / spray greetings, dedication or congratulations. You can write your wishes, fantasy or simply the names of your beloved people / animal / toys.

After you have finished using MLE, point the remote-control eye (it is at the top of the remote) to the Jonely sign at the left side of MLE wooden base and push the button OFF. Then disconnect adapter (B) from electric power source and the ML easel (A) and put the Magic light easel to the place, appointed for it.

Safety instructions

- Use the device only according to its intended purposes as specified in the instruction. The warranty will be invalidated if the device is used for purposes other than those for which it is intended.
- If the device has been stored / transported at a temperature which does not comply with the temperature regime specified in the instruction, the device can not be used immediately. First allow the device to warm up / cool down to the temperature regime specified in the instruction.
- Do not use the device outdoors or in damp rooms.
- The device is fragile. Never step onto or through the device. Do not drag it or lift it by the cable.
- When lifting the easel, hold the wooden part from underneath. The glass is removable – without holding the wooden base, it can slip away.
- Do not immerse the device in water or other fluids. If you wish to rinse the glass under water stream, take the glass out of the wooden base, wash it, clean dry and put in the base again. Be careful, that the glass would not slip away from your hands!!!
- Do not use the device if it is not working correctly, if it has been dropped or has fallen onto hard surface or has been damaged in any other way.
- Do not use the device if the cable or plug are damaged.
- Keep the device and cable away from hot surfaces. Do not place the device near sources of heat.
- Do not attempt to repair the device yourself in the event of a malfunction since this will invalidate the warranty. Repairs should only be carried out by the producer.
- Do not leave the device unattended when it is switched on.
- Do not leave the device on uneven, not stable surfaces, so it would not slip, fall down and break.
- Always switch the device off after use, before cleaning and in the event of malfunctions (during the use) by disconnecting the plug from the socket.
- This device can be used by persons (including children) with limited physical, sensory or mental abilities, or by persons with insufficient experience and/or knowledge, but only in case, the person, using the device is supervised by the responsible for his safety adult.
- Children can use the device only under the superior of adults.

Magic light easel can be damaged

by:

1. Using the device for purposes other than those for which it is intended and in other ways than it is indicated in this instruction for use;
2. The voltage or current jumps;
3. Operating in a higher electric current than allowed;
4. Operating at ambient temperature higher than permitted;
5. Direct sunlight rays, heating operating LED device.
6. The electrostatic charge (protection is enough while storage, delivery, installation and holding in the hands).



Warranty

Item:	MLE5040-0	Producer:	Eventus group UAB
Warranty period:	24 months from date of sales	Tel.:	+370 648 01841
Date of sales:		E-mail:	sales@eventus-group.eu
			www.jonely.eu